


Measuring for your Rollator

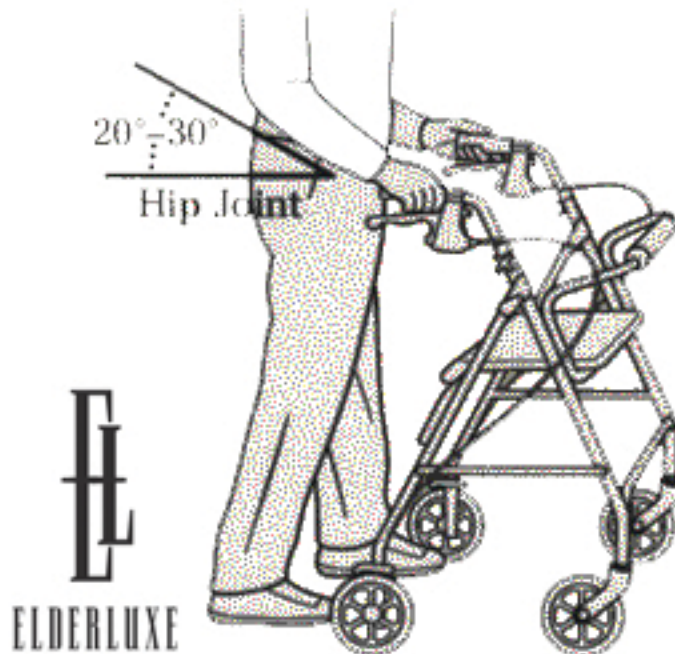

How to measure for your Rollator

Stand behind the rollator with your arms and hands hanging at your sides and both feet in line with the rear wheels.

Adjust the height of the walker handles so that they are even with your hip joint. When you stand straight and grip the handles, your arms should be slightly bent at your elbows (approx 20 to 30 degrees).

Keep in mind this is a "general measurement" since there are all kinds of users.

Most rollators have a 4"-6" handle adjustment. Junior Rollators work well for users 4' 8" up to 5'2" and have a 250lb-300lb weight capacity. Standard Adult-size rollators work for 5'3" up to 5'11". Tall Rollators will fit 5'11" - 6'4". Some rollators offer Tall handlebar extensions if needed.

Seat sizes range from 13" to 18" for Standard Adult sizes and up to 22" for heavy-Duty and even wider for Bariatric Rollator.